

RSS IP Lite MW7

IP 7" Colour TFT Monitor

Installer Manual



Please read this manual carefully before using the product, and keep it for future reference.

We reserve the right to modify the specification of the product in this manual at any time without notice.

This information is specific to the IP-MW7, please refer to the IP-M7 manuals for general installation information

Contents

This guide provides additional information on the IP-MW7 Monitor. Refer to the IP-M7 guide for installation and installation information.

1. Parts and Functions
2. Home Screen
3. Status Bar Icons

Please refer to the IP-M7 Installer and User manuals for further information.

Important Information


By default the monitor has two functions 'Enabled'

- 1 **Self Start (Monitor function) this enables the camera in the door entry panel(s) to be turned ON remotely by the monitor.**
- 2 **Intercommunication between dwellings, this enables one dwelling to call another via a 'Names List'**

If these functions are NOT required they must be disabled in Installer Settings when the monitor is installed and configured. See sections 6 and 7 of the IP-M7 manual for the functionality and section 13 of the IP-M7 Installer Manual for enabling and disabling the functions.

1. Parts and Functions

LCD Display

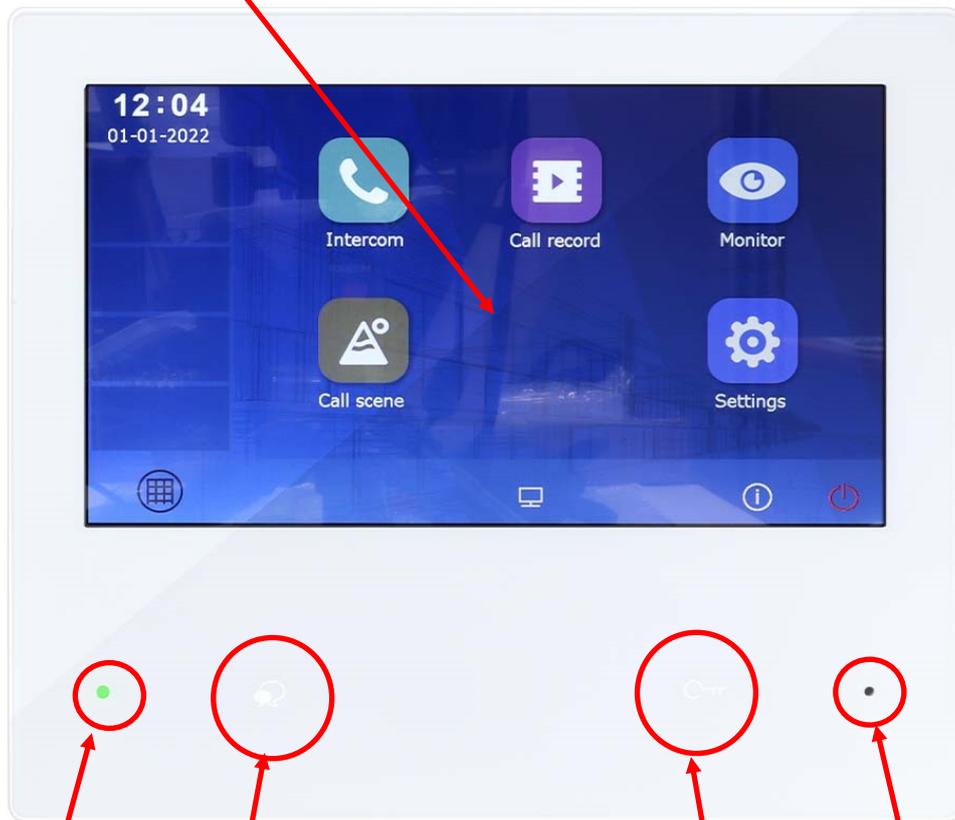

Status Indicator

Microphone

Talk/Monitor Button

Unlock Button

Back Illuminated

Back Illuminated

The Status Indicator colour identifies different modes


Green—Monitor in standby mode

Red—Do Not Disturb

Red Flashing—Missed Call

Blue—Incoming Call

2 Home Screen IP-MW7

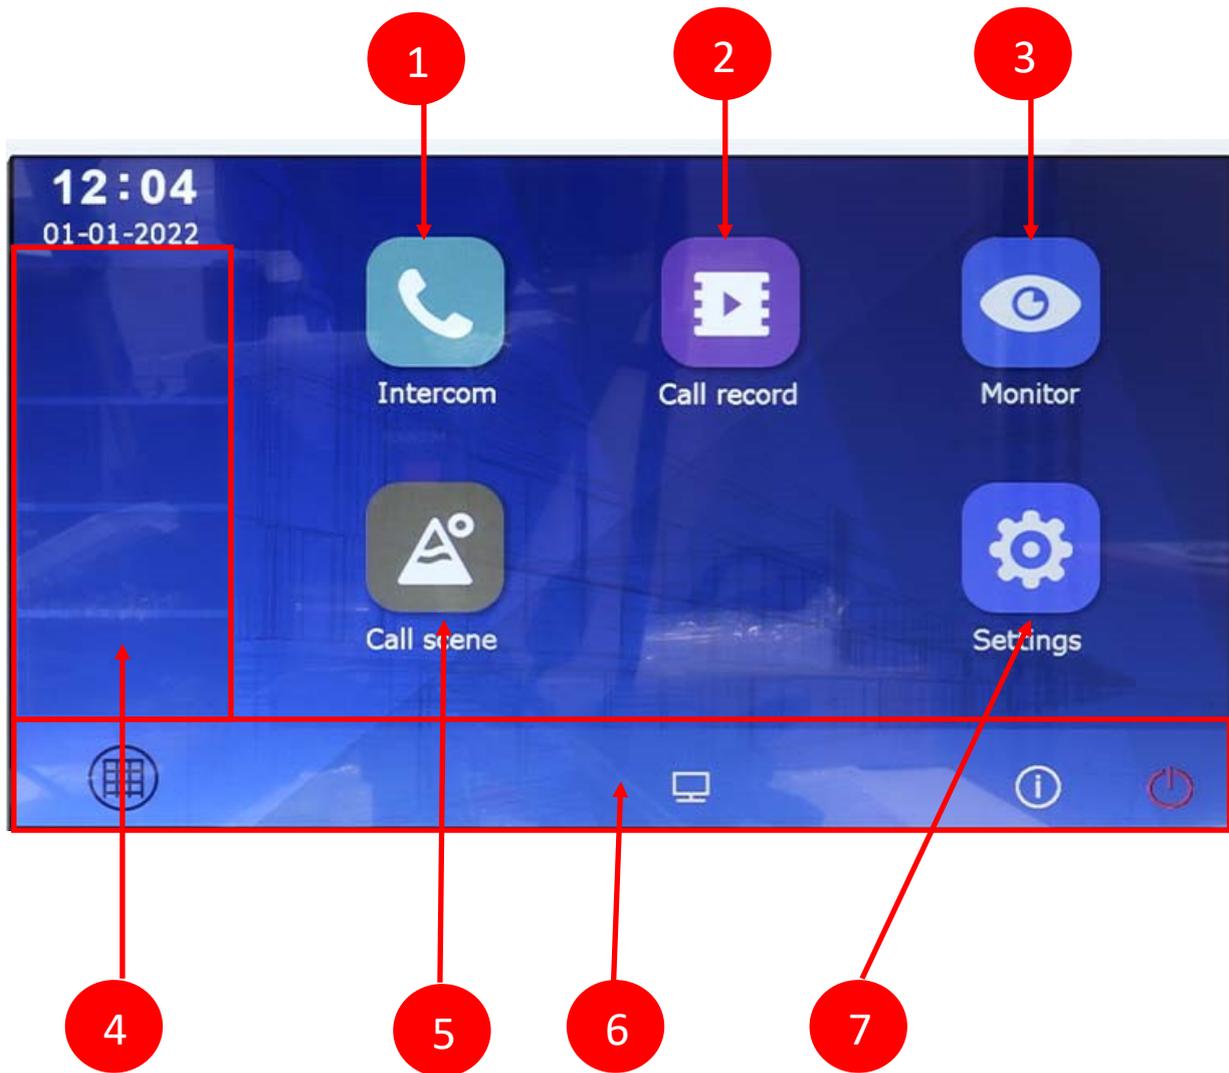

- 1 Intercom Icon—Enables intercommunication with other monitors (if enabled by the Installer)
- 2 Call Record Icon—Allows you to view previous and missed calls.
- 3 Monitor Icon—Allows you to monitor the Entrance Panel(s) (if enabled by the Installer)
- 4 Favourites Bar—Up to 4 favourites/shortcuts can be added here.
- 5 Call Scene Icon—Allows the call mode to be set (includes 'Do Not Disturb')
- 6 Status Bar—Displays icons showing the monitor status
- 7 Settings Icon—Provides access to User settings, Manager settings and Installer settings (Manager and Installer settings require passwords for access)

3. Status Bar Icons

Icon	Description	
	Missed call	Indicates 1 or more missed calls. Tap to review the missed call.
	Do Not Disturb	Indicates the device is in “Do Not Disturb” mode.
	Divert call	Indicates the device is in “Divert call” mode.
	Device online	Indicates the device is online, but not connected to the internet.
	Cloud server connected	Indicates the device is connected to the cloud server.
	Cloud server not connected	Indicates the device is not connected to the cloud server.
	Cloud server anomaly	Indicates the device cloud server connection is abnormal.
	mute	Indicates the device is in “Mute” mode.

Other Status Icons

Icon	Description	
	Recording	Indicates the device is recording
	Talking	Indicates the device is in “talk” status.
	Unlock	The currently viewed door is open.