

Raytel Security Systems

40510 Switchboard

 
 
Short User Guide





Index







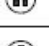




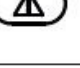


Page 2	Image of switchboard and Keyboard layout
Page 3	Button descriptions, Standby mode, answering and initiating calls.
Page 4	Address Book, Internal/External modes.
Page 5	Missed Calls
Page 6	Entrance Panel 'Self Start', Entrance Panel 'Lock release', Keypad lock

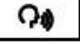For further information please refer to the Vimar 40510 User Manual which can be accessed from our website in the support section:

<https://www.raytelsecurity.com/kbase/door-entry-systems-and-products-support/>

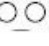


	Menu / Select
	Exit / Cancel
	Up Down
	Alphanumeric keys


	Hands-free
	End Conversation
	Internal / External
	Day / Night
	Self-start
	Padlock
	Wait
	Input / Transfer
	F1 (programmable)
	F2 (programmable)
	Contacts List
	List of alert notifications
	Events list
	Lock


Standby Mode

The switchboard will enter standby mode after a specified time. In this mode, screen brightness is reduced and power consumption is reduced.


If a function button is pressed when the switchboard is in standby, that function is implemented immediately once the switchboard has awoken. In standby, the  key wakes up the switchboard without implementing any other functions.

To Answer a Call

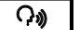An incoming call will be indicated by the switchboard ringing. To answer the call either pick up the handset or press  for 'Hands Free'


To finish the call, replace the handset or press  to cancel 'hands Free'



To initiate a call to a dwelling


Enter the number associated with the dwelling and lift the handset or press  for 'Hands Free' operation.


To Access An Address Book

If an address book has been configured within the switchboard it can be accessed as follows:

Press and Hold the 'Contacts List' button  for 1 second or more.

The display will then show a list of all contacts. Scroll through the list using  and  until the required contact is selected.


Press  to start a 'Hands Free' call to the contact OR lift the receiver to call the contact.


To terminate the call either replace the receiver on to its cradle OR press  if it was a 'Hands Free' call.


Internal/External Mode

Internal mode intercepts ALL calls from the Entrance Panel(s) to dwelling handsets/monitors.

External mode allows ALL calls from the Entrance Panel(s) to dwelling handsets/monitors. The switchboard can be called from the dedicated switchboard or porter button on the Entrance Panel(s)

Pressing the  button will switch between Internal and External modes.

Internal mode is identified by the  symbol in the top left corner of the display.

External mode is identified by the  symbol in the top left corner of the display.

Missed Calls

Missed calls will be identified by the  icon on the display flashing as shown below:




To access a list of missed calls press  the most recent event will be shown as number 1.

To scroll through the events press  or  to close the list press 

To Clear Missed Calls






To delete the entire missed call list press and hold  for at least 1 Second.

Depending on the initial configuration of the switchboard a password may then be requested, if so enter the default code 1234 and press 

It is not possible to delete individual missed calls.



Entrance Panel Self Start

If this function has been configured in the settings of the switchboard, the Entrance Panel(s) can be 'Self Started' to enable Audio and Video (if it is a video system) to be established between the switchboard and the selected panel.




Press the  button for more than one second and the Master Entrance Panel will 'Self Start'. If there is more than one Entrance Panel available then a list of panels will be presented, use  or  to scroll to the entrance required and press  again to self start the panel. If audio is required lift the handset to establish audio with the panel. To end the 'Self Start' press .


Entrance Panel Lock Release

If this function has been configured in the settings of the switchboard the lock release at the Entrance Panel(s) can be released remotely.

Press the  button for 1 second or more to generate a list of panels. Use  or  to select the required lock release, press  again to release the lock.

Keyboard Locked

The  key locks the keyboard. To unlock it, press the  key again, enter the unlock PIN (default 0000) and press the key .

When locked, calls can still be answered by pressing the key  or lifting the handset. At the end of the call the switchboard reverts to locked mode.